



Generation Settings for HAC Software

1. Location of Generation.ini file

you can find **Generation.ini** file under <your HAC software>\Database\

just open this INI file.

HAC V3.2 PRO or above version is compatible with both G3 and G4.

2. How to change the Generation Settings?

If you are using G4 gateway such as RS232IP/Z-Audio2, you need to set Generation=4,

If you are using G3 gateway, you need to set Generation=3.

For G4 gateway, here are the correct settings:

[Generation]

Generation=4

For G3 gateway, here are the correct settings:

[Generation]

Generation=3

Support

Email: Mendel@SmartHomeGroup.com

Smart Group