Manual for Simple Show Control Software

Manual version: V1.3
Prepared by: Mendel Lin
Updated Date: June 06, 2012
Email: Mendel@SmartHomeGroup.com

1. Installation

1.1 Upgrade windows media player to V 11 or above

Before run Simple Show Control software, the version of windows media player must be V11 or above, if it has already been upgraded it, you can pass by this step.

☆**If you can not upgrade windows media player to version 11, please read the steps below.**

a. Download windows media player (WMP) 11 from internet
b. Don't setup the WMP directly, uncompress the WMP 11.
c. You will the see following 4 EXE files after you uncompress
> umdf.exe
> wmdbexport.exe
> wmfdist11.exe
> wmp11.exe

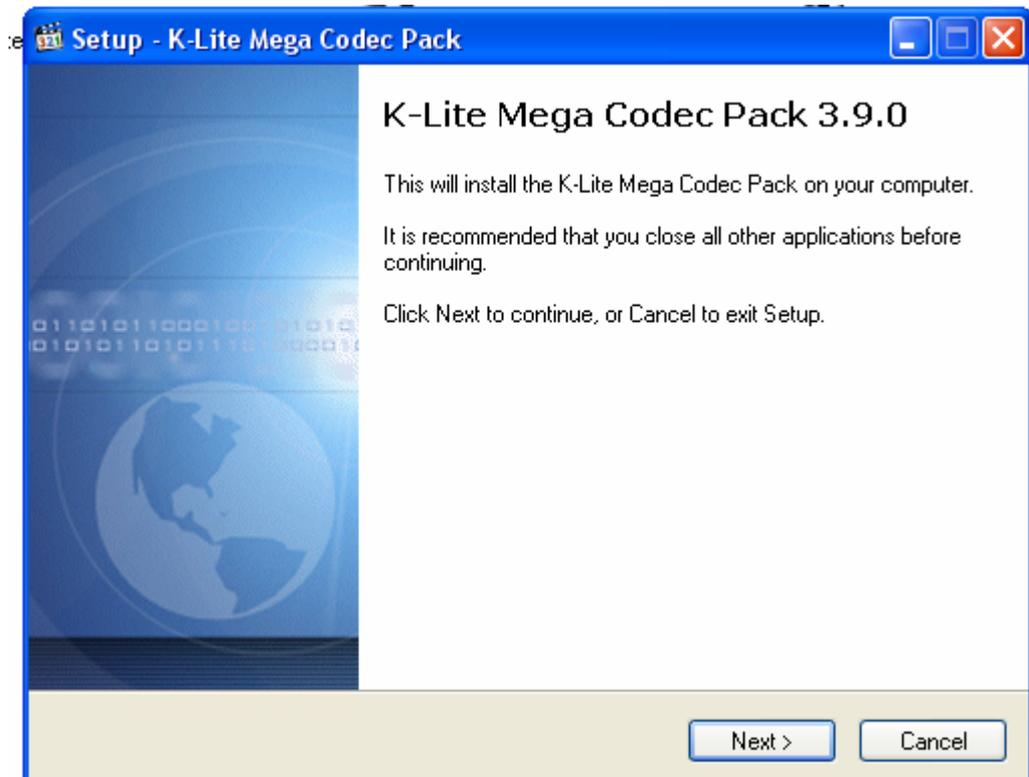You need install them one by one in order,
First Install umdf.exe
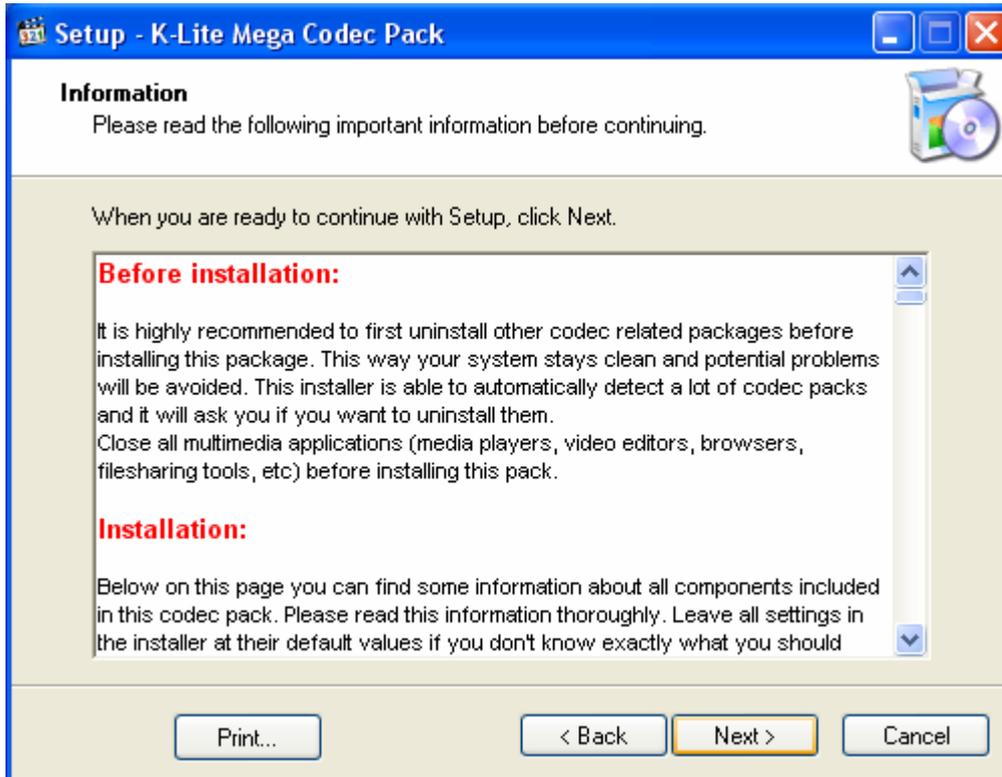second install wmdbexport.exe
Third install wmfdist11.exe
Fourth install wmp11.exe

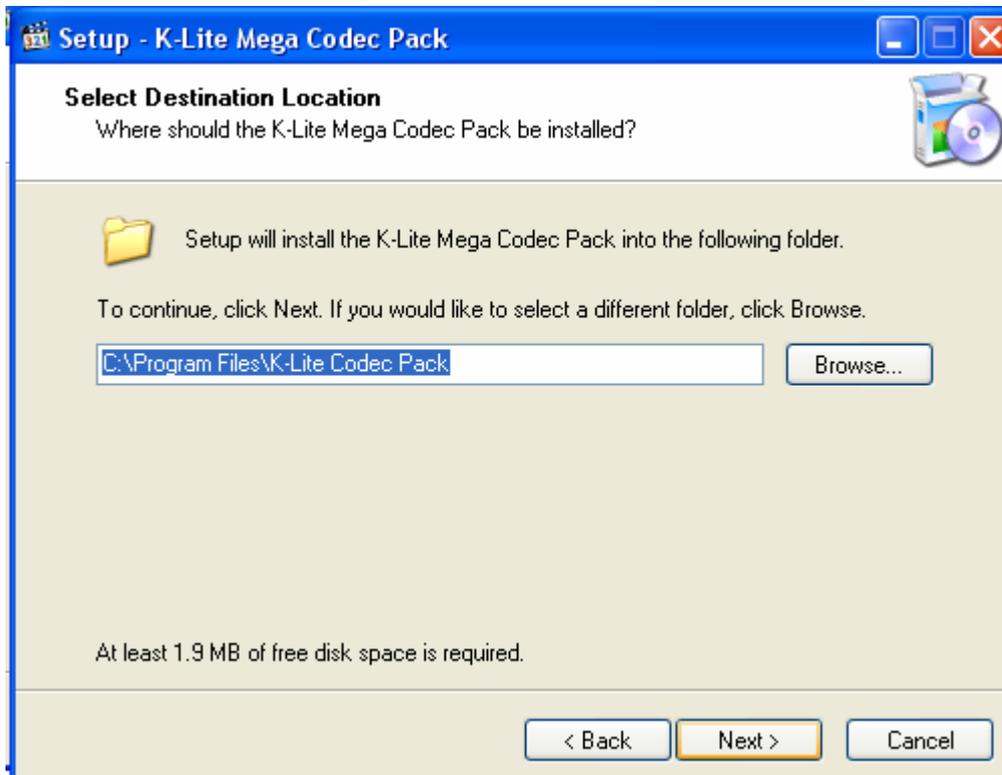*Run the windows media player when you finished installation.*

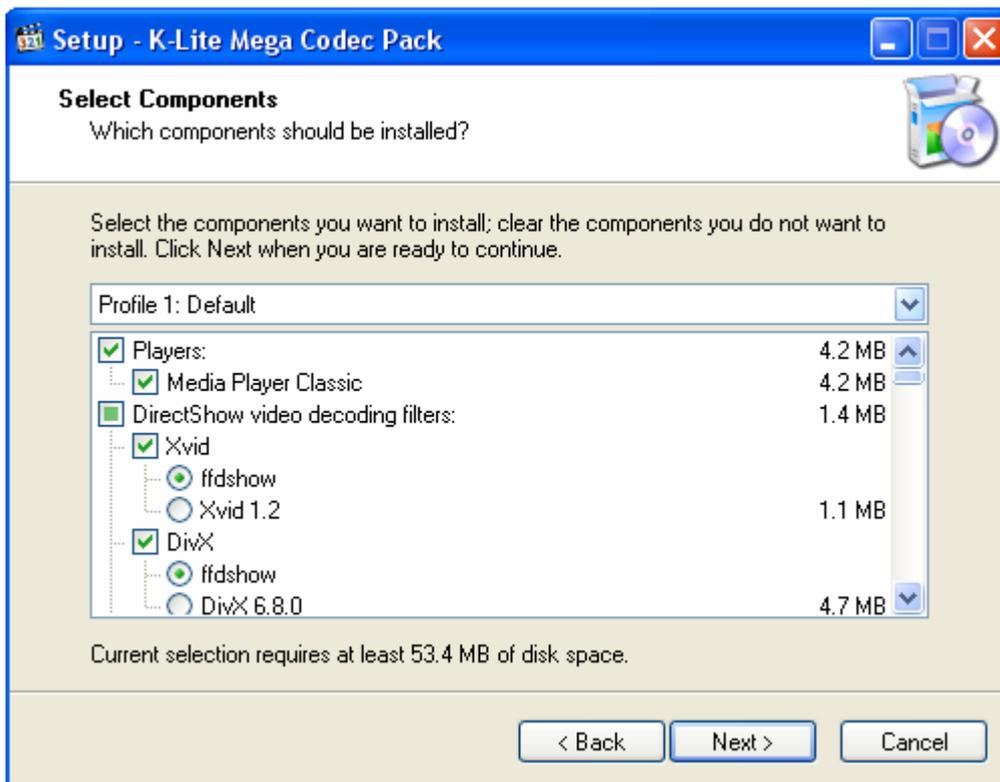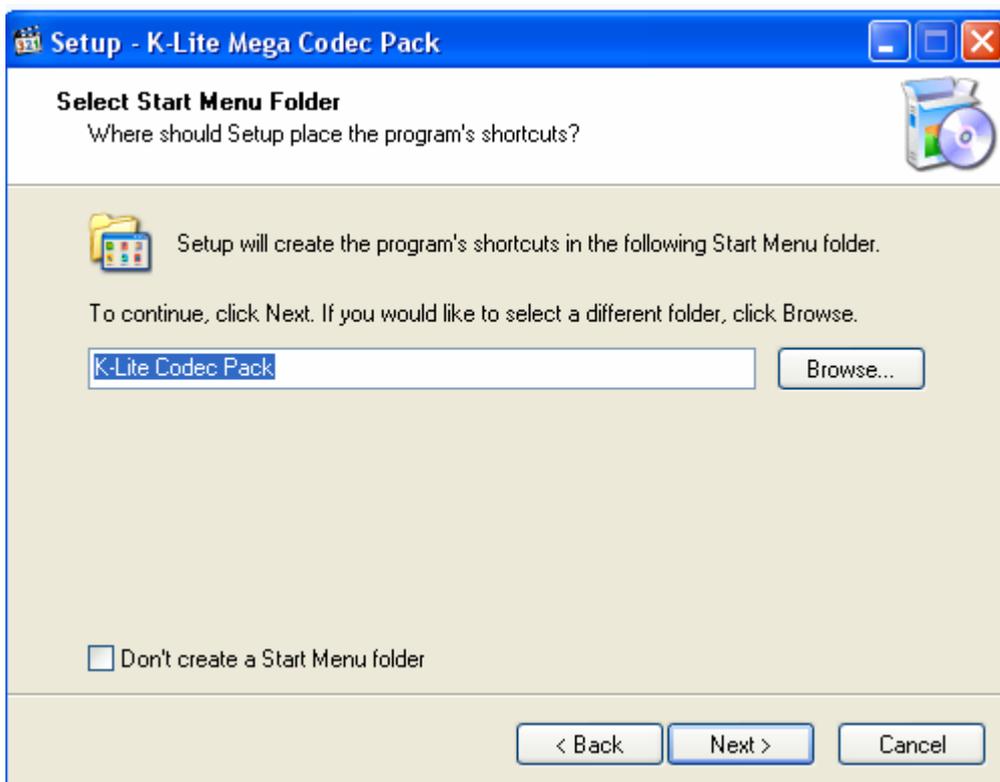## 1.2 Install codec "klmcodec390.exe" for windows media player
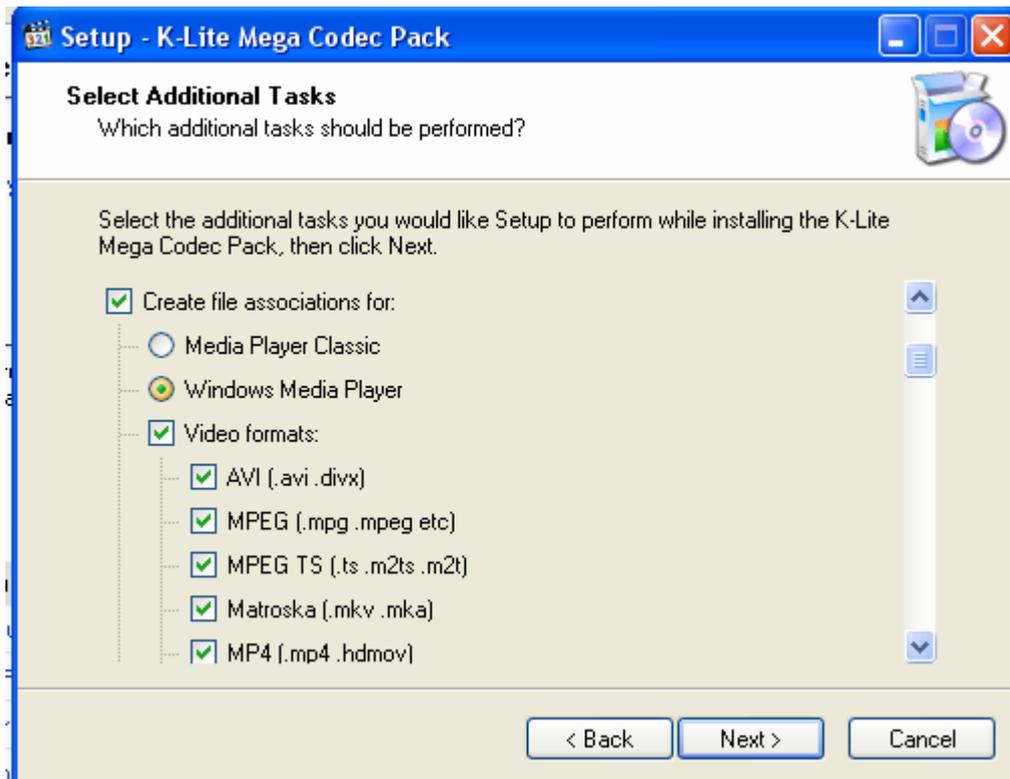
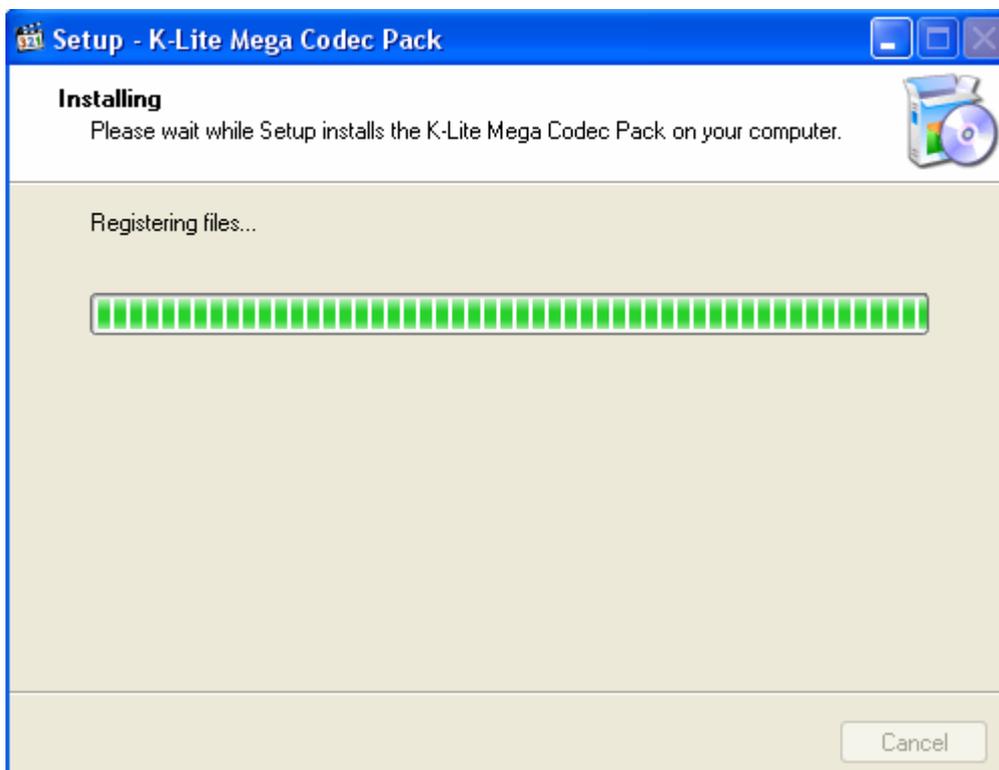Click "Next"
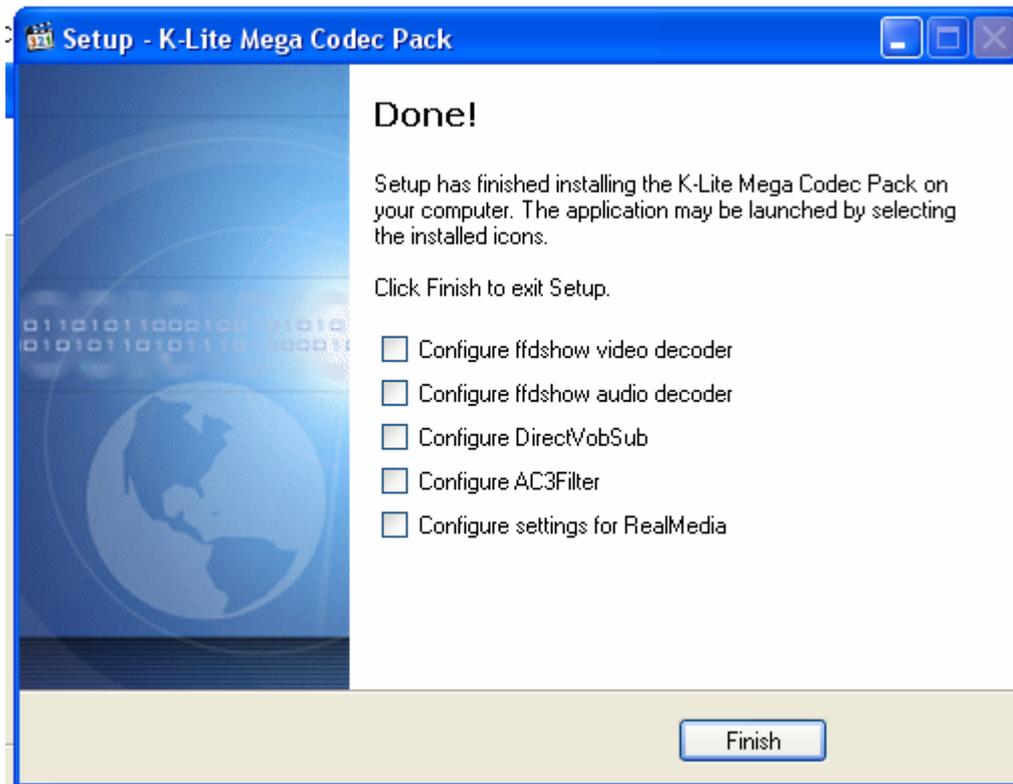

Click Next

Click Next, Choose Profile 1:Default

Click Next

Click Next, **you must select windows media player,** and check all the format of video

Click Next

Done

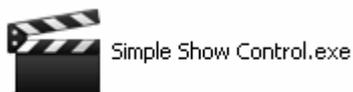1.3 **Copy the software "Simple Show Control" on your computer**
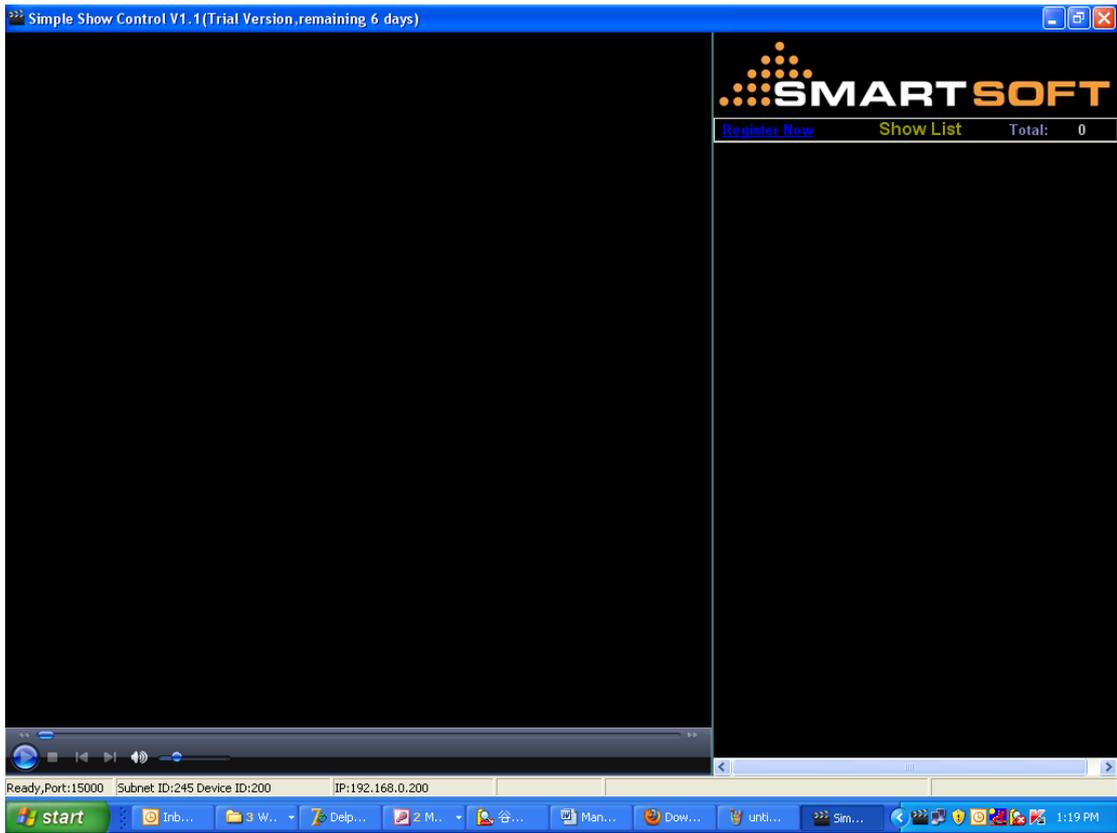   Put the software on driver D/E/F except driver C

1.4 Database
Please know that all the configuration data are saved under the folder "Database", if you want to backup the data, you can just backup this folder.

2. Trial version & PRO version

Just click the software icon

After you run the software, you will see the main page and the icon on the taskbar.

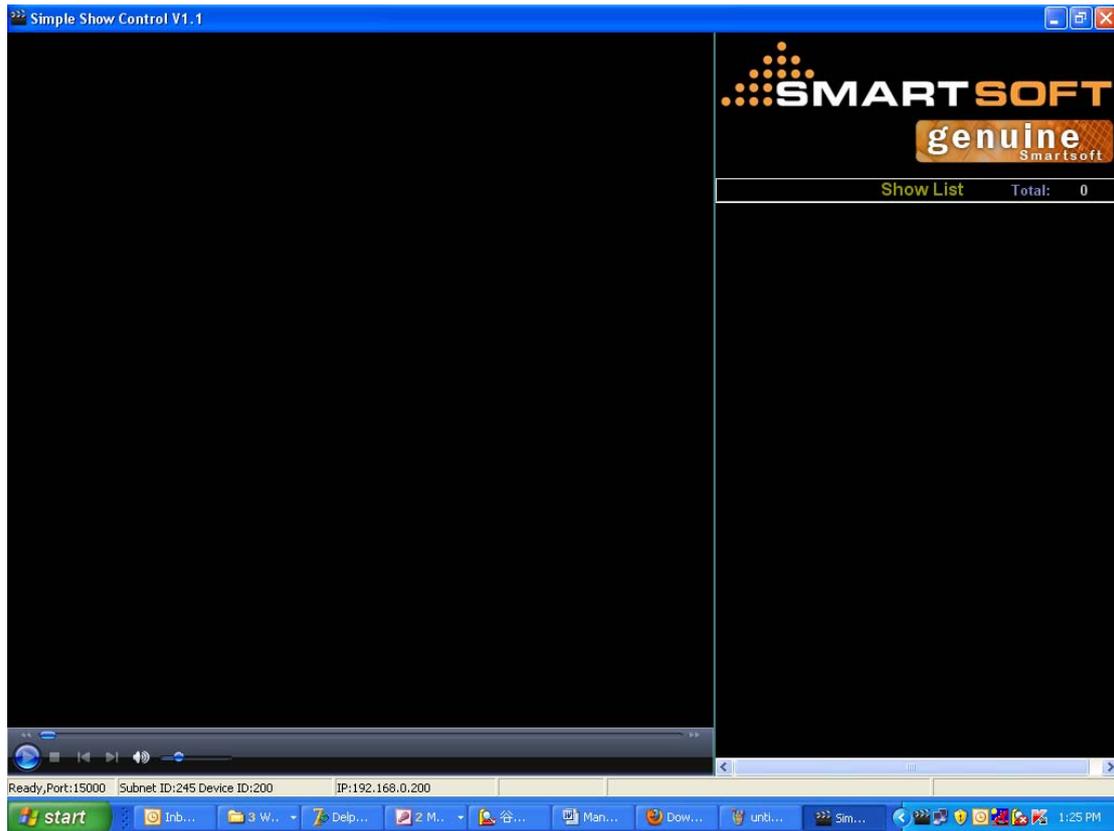**Register Software**

Click Register Now

www.smart-supplier.com/form

After payment is done, you will be requested to send the machine code above to us by email, and we will release the license for you.
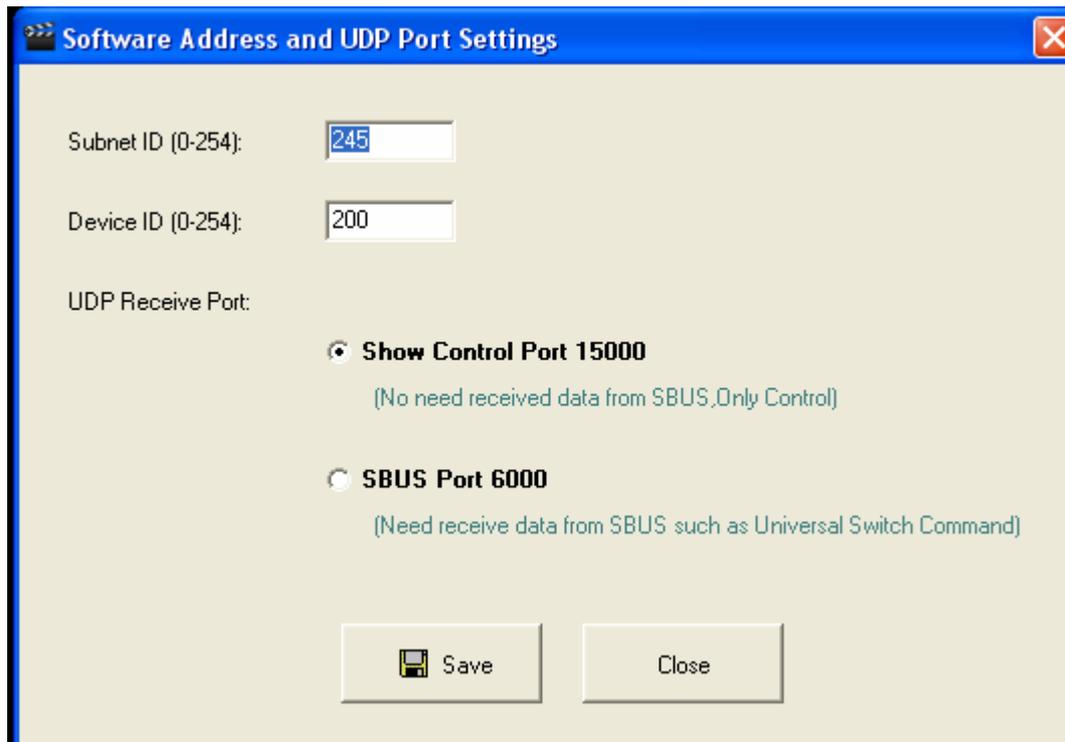
After you get the license from us, you just need put the license to text box above, then click Register button, if your license is correct, the software will go to the page below:

3. Software address and UDP Port

Right click the icon which is on the taskbar or Show List, you can go to settings pages or close the software.
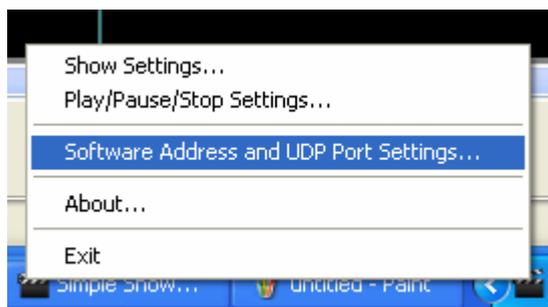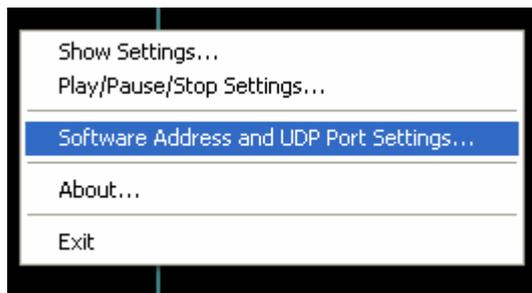
Option 1: Show Control Port 15000

if do not need to control Simple Show Control by DLP/HAC software/Logic module and so on, you can choose UDP receive Port to option 1 "Show Control Port 15000",

The advantage of option 1 is that you can run Simple show Control software with S-BUS software together; there is no conflict with UDP Port, because they are using different UDP Port.

Option 2: SBUS Port 6000

If you need to control Simple Show Control by DLP/HAC Software/Logic Module and so on, you must select SBUS port 6000, but you can not run Simple Show Control Software with SBUS software together at the same computer.
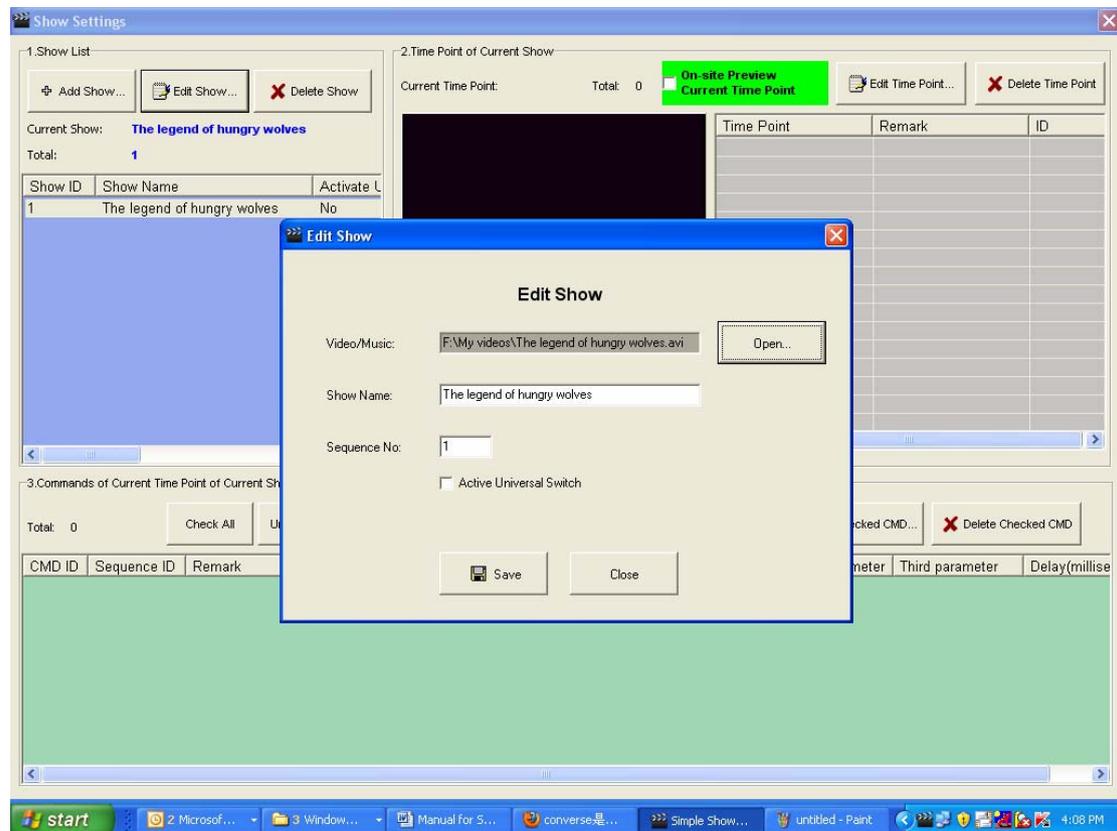
4. Show Settings
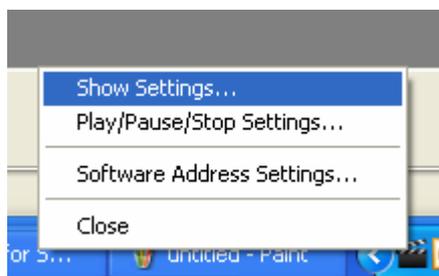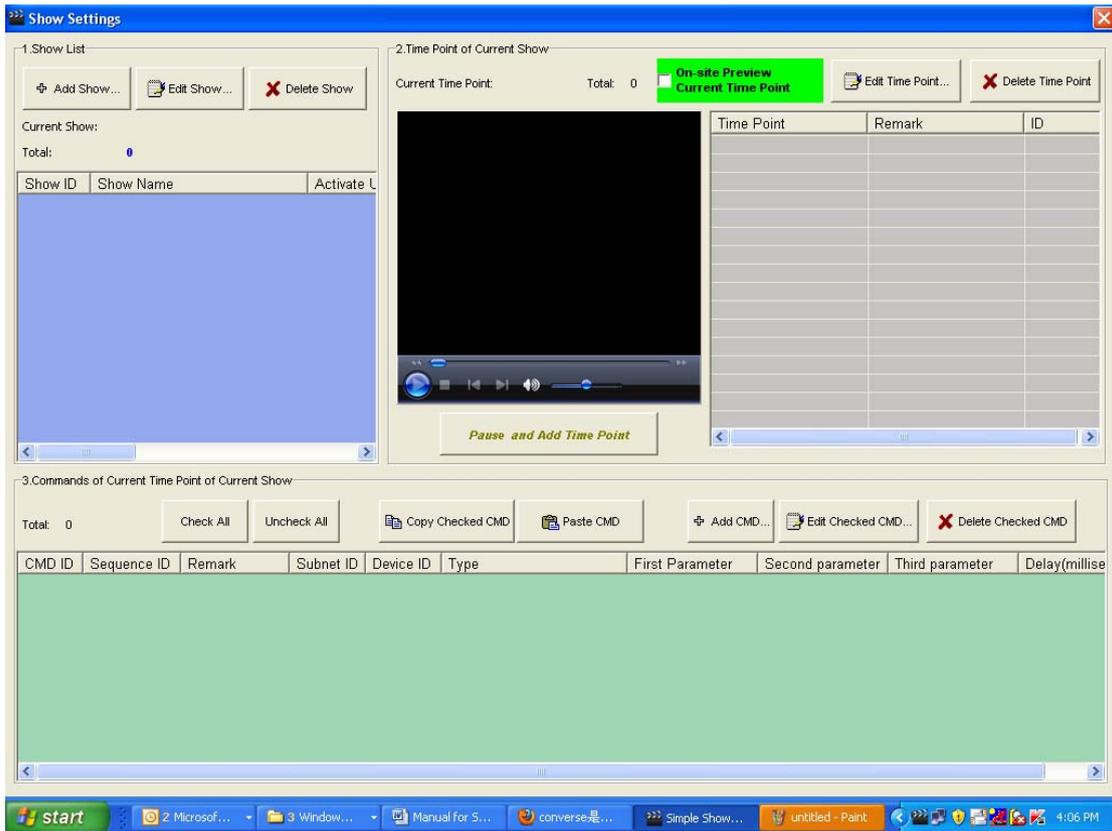
Add Show

If you need Simple Show Control software to be controlled by HAC/DLP and so on, not only you need choose UDP port 6000, but also you need active Universal Switch and assign

Edit Show
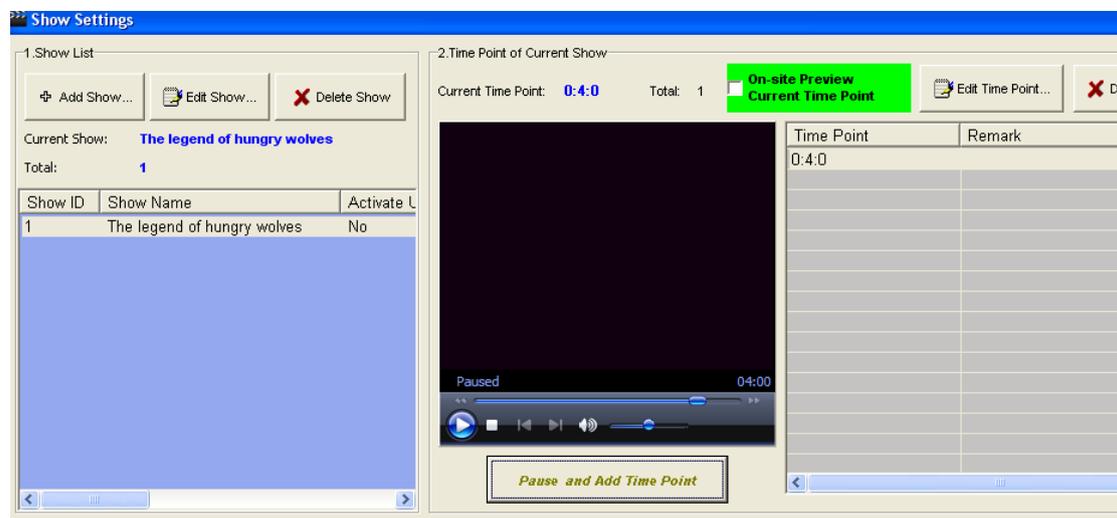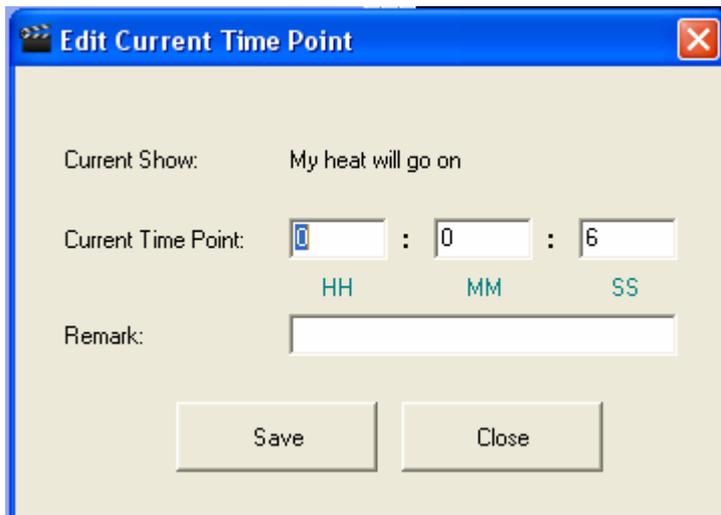

5. Time Point of the Show

Add new time point:

when you play the video, just click the button "Pause and Add Time Point" to add new time point you want, The software will automatically get the current playing time of video which you are watching.

Edit time point:

On-site Preview Current Time Point
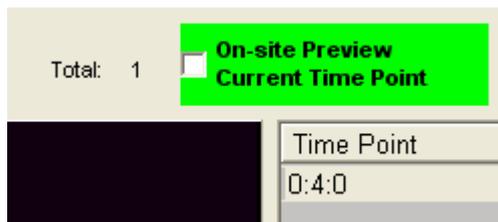
Check the checkbox below to preview the programming of current time point you made.

6. Commands for current time point of the Show
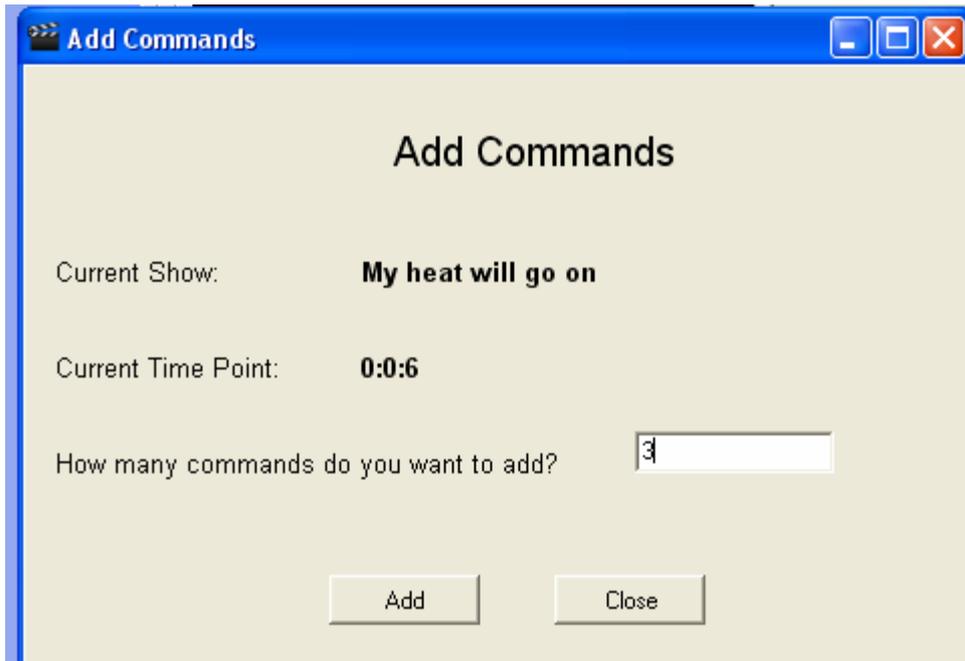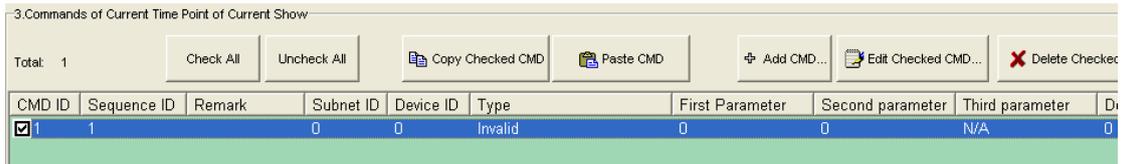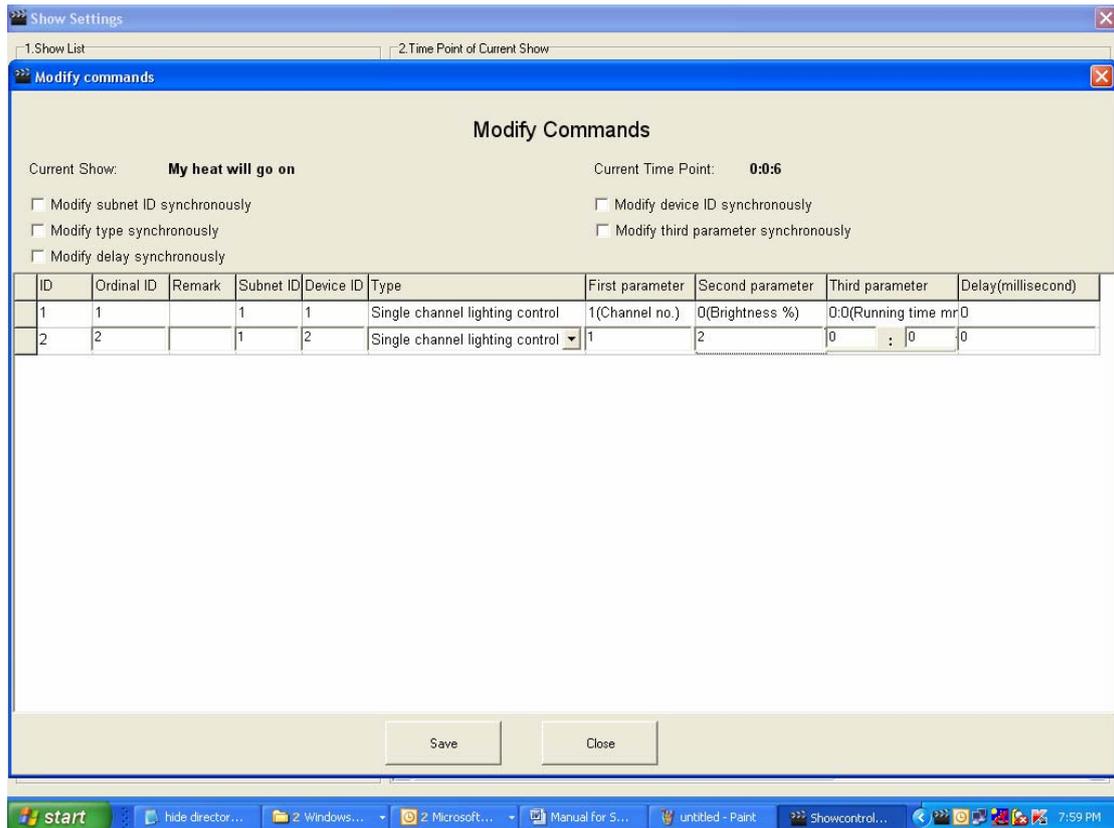
Add new commands

Select the show, and select the time point, and then you can add the commands

Edit the commands

Click the button "Modify checked"

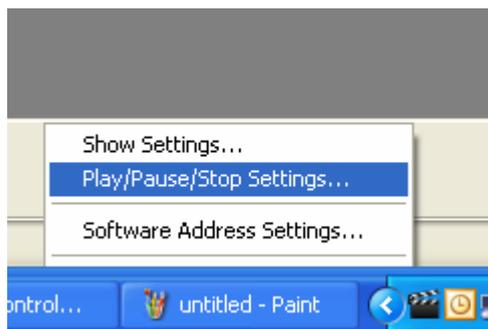| CMD ID	Sequence ID	Remark	Subnet ID	Device ID	Type	First Parameter	Second parameter	Third parameter	De
☑ 1	1		0	0	Invalid	0	0	N/A	0

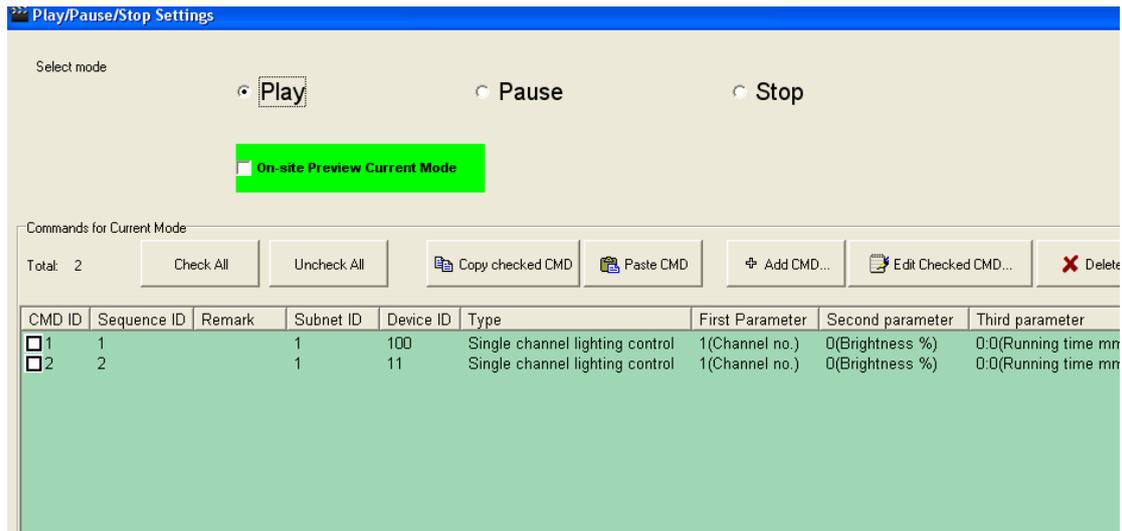Total: 1

7. Play/Pause/Stop Settings

you can make the programming for following functions:

Turn off all the lights when it's playing video
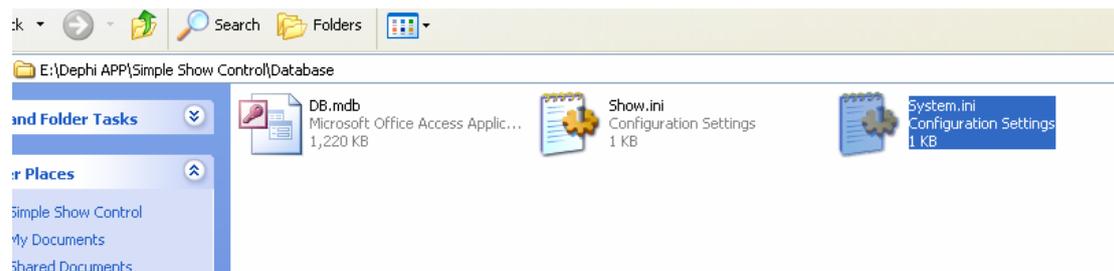
Turn on some of lights when pause video

Turn on all lights when stop the video

8. Generation Settings

the location is \Database\System.ini

Open the file System.ini
[Generation]
GenerationNo=4

If you are using Smart-BUS G4 gateway such as G4 RS232IP,then you need set **GernerationNo**=4
If you are using Smart-BUS G3 gateway such G3 RS232IP or 1Port ,then you need set **GernerationNo**=3

If have any question or suggestion, please contact me, Thanks.

Mendel@SmartHomeGroup.com